

Product Line	Series	Categorie	Model	Set Assy No.	Description	Package Contents	Assembly no.)	Remarks
OS	Batteries	Accessories	B-20N	496466-0240	Battery pack for BHT-2000 + BHT-4000			
OS	Batteries	Accessories	B-50N	496466-0370	Battery pack for BHT-5000 + QHT-1000			
OS	Batteries	Accessories	B-50D	496466-0380	Battery case for BHT-5000			
OS	Batteries	Accessories	B-60N	496466-0530	Battery pack for BHT-6000/BHT-8000			spare part battery without cover
OS	Batteries	Accessories	B-60N + Cover	496461-0080	Battery pack for BHT-6000 (blue)			spare part battery with cover
OS	Batteries	Accessories	B-60N + Cover D	496461-0110	Battery pack for BHT-6000D (grey)			
OS	Batteries	Accessories	B-70L	496461-0300	Battery pack for BHT-7000/7500			
OS	Batteries	Accessories	B-70D	496461-0380	Battery case for BHT-7000/7500			
OS	BHT-100	Consumables	Belt	496949-0010	Hand Strap			minimum lot: 10 pcs.
OS	BHT-100	Consumables	Stylus	496999-0360	Touch pen			minimum lot: 10 pcs.
OS	BHT-300	Terminal	BHT-302B	496300-4620	Hand Held 1D Batch Terminal, IRDA interface	BHT-302B BT-20L Hand Strap	(496310-2980) (496461-0450) (496472-0110)	26 keys, 5MB (user area approx. 2.2 MB) including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-303B	496300-4630	Hand Held 1D Batch Terminal, IRDA interface	BHT-303B BT-20L Hand Strap	(496310-3250) (496461-0450) (496472-0110)	26 keys, 9MB (user area approx. 5.8 MB), including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-303BW WPA	496300-4570	Hand Held 1D RF Terminal, including IEEE802.11b Radio Module, IRDA interface, WPA	BHT-303BW WPA BT-20L Hand Strap	tba (496461-0450) (496472-0110)	26 keys, 9MB (user area approx. 5.8 MB) including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-303BW	496300-3901	Hand Held 1D RF Terminal, including IEEE802.11b Radio Module, IRDA interface	BHT-303BW BT-20L Hand Strap	(496310-3270) (496461-0450) (496472-0110)	26 keys, 9MB (user area approx. 5.8 MB) including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-303BB	496300-4071	Hand Held 1D Terminal, IRDA interface, Bluetooth interface	BHT-303BB BT-20L Hand Strap	(496300-4071) (496461-0450) (496472-0110)	26 keys, 9MB (user area approx. 5.8 MB) including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-303BWB	496300-4050	Hand Held 1D RF Terminal, including IEEE802.11b Radio Module, IRDA interface, Bluetooth interface	BHT-303BWB BT-20L Hand Strap	(496300-4051) (496461-0450) (496472-0110)	26 keys, 9MB (user area approx. 5.8 MB) including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-304Q	104969-0311	Hand Held 2D Batch Terminal, IRDA interface	BHT-304Q BT-20L Hand Strap	(496900-0310) (496461-0450) (496472-0110)	26 keys, 18MB (user area approx. 12.5 MB), including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-304QB	104969-0491	Hand Held 2D Terminal, IRDA interface, Bluetooth Interface	BHT-304QB BT-20L Hand Strap	(104969-0491) (496461-0450) (496472-0110)	26 keys, 18MB (user area approx. 12.5 MB), including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-304QW WPA	104969-0700	Hand Held 2D RF Terminal, including IEEE802.11b Radio Module, IRDA interface, WPA	BHT-304QW WPA BT-20L Hand Strap	tba (496461-0450) (496472-0110)	26 keys, 18MB (user area approx. 12.5 MB), including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-304QW	104969-0371	Hand Held 2D RF Terminal, including IEEE802.11b Radio Module, IRDA interface	BHT-304QW BT-20L Hand Strap	(496900-0380) (496461-0450) (496472-0110)	26 keys, 18MB (user area approx. 12.5 MB), including one battery pack BT-20L
OS	BHT-300	Terminal	BHT-304QWB	104969-0511	Hand Held 2D RF Terminal, including IEEE802.11b Radio Module, IRDA interface, Bluetooth interface	BHT-304QWB BT-20L Hand Strap	(104969-0511) (496461-0450) (496472-0110)	26 keys, 18MB (user area approx. 12.5 MB), including one battery pack BT-20L
OS	BHT-300	Peripheral	CU-301	496400-1801	Communication Cradle, RS232 Interface with charging function	CU-301 Operators Guide	(496320-1440) (496487-4610)	RS232C, Charger, w/o AC Adapter
OS	BHT-300	Peripheral	CU-311	496400-1761	Network Communication Cradle, for LAN Application	CU-311	(496320-1610)	Ethernet, Charger, w/o AC Adapter
OS	BHT-300	Peripheral	CU-321	496400-2120	Communication Cradle, USB interface with charging function	CU-321 Operators Guide Install Guide	(496320-1450) (496487-4610) (496487-4590)	USB, Charger, w/o AC Adapter
OS	BHT-300	Peripheral	CH-351	496450-0581	1 Slot Terminal Charger, Only Charging function	CH-351 Operators Guide	(496465-0630) (496487-4620)	Terminal Charger, w/o AC Adapter

OS	BHT-300	Peripheral	CH-201	496450-0511	1 Slot Battery Charger	CH-201, PW Cable EU PW Cable EU	(496465-0640) (496487-4440)	with EU Power cable, please add EU/UK converter plug 496467-CP1B for UK market
OS	BHT-300	Peripheral	CH-204	995810-1120	4 Slot Battery Charger	CH-204 PW cable EU		4x CH-201 included with EU power cord for UK free converter plug 496467-CP2B required
OS	BHT-300	Peripheral	AC Adapter	454865-0420	for CU-200, CH-251, CU-300, CH-351, CU-401, CU-421, CH-451, GT-10, QK-12, CU-8011			100-240V, please add EU/UK converter plug 496467-CP1B for UK market
OS	BHT-300	Accessories	BT-20L	496461-0450	Battery Pack, for BHT-200, BHT-300, BHT-400	BT-20L Case for battery cartridge	(496499-0900) (496471-0150) (496487-4410)	Lithium-Ion
OS	BHT-300	Peripheral-Lego	AC Adapter 1-slot, E	496460-0444	1 slot, 230VAC/12VDC EU Version for CU series	EU version		
OS	BHT-300	Peripheral-Lego	AC Adapter 1-slot, U	496460-0555	1 slot, 230VAC/12VDC UK Version for CU series	UK version		
OS	BHT-300	Peripheral-Lego	AC Adapter 4-slot, E	496460-0222	4 slot, 100-240 VAC/12 VDC EU Version for CU series	EU version		
OS	BHT-300	Peripheral-Lego	AC Adapter 4-slot, U	496460-0333	4 slot, 100-240 VAC/12 VDC UK Version for CU series	UK version		
OS	BHT-300	Peripheral-Lego	Base Serial	496400-234S	RS232 interface for BHT-200, BHT-300, BHT-400			
OS	BHT-300	Peripheral-Lego	Base Charger	496400-234H	Charging cradle for BHT-200, BHT-300, BHT-400 w/o communication, charging only			
OS	BHT-300	Peripheral-Lego	Terminal adapter for	496400-0333	Adapter for CU-Base for BHT-300			
OS	BHT-300	Peripheral	I/F Cable	496400-KAB062	RS232 Interface Nullmodem Cable, for CU-201, CU-301, CU-401, CU-8001, CU-8002, Lego Cradles			9 DSub female to 9 Dsub female, for PC serial I/F (Com port) and CU, 1.8 Meter
OS	BHT-300	Peripheral	I/F Cable	496400-KAB597	USB interface cable for CU-8021, CU-221, CU-321, CU-421 USB Type A to Type B			1.8 Meter
OS	BHT-300	Software	BHT Term	995810-1140	Terminal Emulation Software for BHT-300 License Key No. Will be released upon receipt of the BHT's Serial number.			incl. VT100/220, TN3270, TN5250
OS	BHT-300	Accessories	BHT-300B leather ca	496301-L635	Leather case including shoulder strap			
OS	BHT-300	Accessories	BHT-300Q leather ca	496301-L636	Leather case including shoulder strap			
OS	BHT-300	Accessories	BHT-300B leather ho	496301-L641	Leather holster			
OS	BHT-300	Accessories	BHT-300Q leather ho	496301-L642	Leather holster			
OS	BHT-300	Peripheral	Cable	496400-333A+	Interface Cable 9-Dsub connector	I/F Cable		for PC serial I/F (Com port)
OS	BHT-300	Service	BHT300 Batch	SERV3470-24	24 Month Service Contract		496300-4620 496300-4630	
OS	BHT-300	Service	BHT300 Batch	SERV3470-36	36 Month Service Contract		496300-4620 496300-4630	
OS	BHT-300	Service	BHT300 WIFI	SERV3900-24	24 Month Service Contract		496300-3901	
OS	BHT-300	Service	BHT300 WIFI	SERV0310-36	36 Month Service Contract		496300-3901	
OS	BHT-300	Service	BHT300 Batch 2D	SERV0310-24	24 Month Service Contract		104969-0311	
OS	BHT-300	Service	BHT300 Batch 2D	SERV0310-36	36 Month Service Contract		104969-0311	
OS	BHT-300	Service	BHT300 WIFI 2D	SERV0370-24	24 Month Service Contract		104969-0370	

OS	BHT-300	Service	BHT300 WIFI 2D	SERV0370-36	36 Month Service Contract		104969-0370	
OS	BHT-300	Consumables	Battery	496331-1630	Battery Cover			minimum lot: 10 pcs.
OS	BHT-300	Consumables	Belt	496472-0110	Hand Strap			minimum lot: 10 pcs.
OS	BHT-5000	Consumables	Belt	454862-0020	Hand Strap			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Belt	454862-0020	Hand Strap			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Holder	496333-0610	Pocket clip (Blue)			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Holder	496333-0720	Pocket clip (Grey)			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Battery Case	496331-0921	Battery cover (Blue, Alkaline)			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Battery Case	496331-1050	Battery cover (Grey, Alkaline)			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Battery Case	496330-0970	Battery cover (Blue, Ni-MH)			minimum lot: 10 pcs.
OS	BHT-6000	Consumables	Battery Case	496330-1040	Battery cover (Grey, Ni-MH)			minimum lot: 10 pcs.
OS	BHT-7000	Accessories	B-70L	496461-0300	Li-Ion Battery Pack	Operator's Guide Li-Ion Battery Pack	(496487-0430)	Spare Battery
OS	BHT-7000	Accessories	B-70D	496461-0380	Battery Case	Operator's Guide Battery Case		Spare Battery Case
OS	BHT-7000	Consumables	Belt	496472-0090	Hand Strap			minimum lot: 10 pcs.
OS	BHT-8000	Terminal	BHT-8044 (2 Years warranty)	496300-4430	Hand Held 1D Batch Terminal, numeric keypad / straight beam, IRDA interface	BHT-8044 Handstrap Operator's Guide	(496310-2731) (454862-0110) (496487-4150)	512 Kbyte RAM, 4 MB ROM, 26 keys, dark blue colour
OS	BHT-8000	Terminal	BHT-8044D (2 Years warranty)	496300-3281	Hand Held 1D Batch Terminal, numeric keypad, IRDA interface distance type / straight beam	BHT-8044D Handstrap Operator's Guide	(496310-2800) (454862-0110) (496487-4150)	512 Kbyte RAM, 4 MB ROM, 26 keys, dark blue colour
OS	BHT-8000	Terminal	BHT-8048D (2 Years warranty)	496300-3341	Hand Held 1D Batch Terminal, numeric keypad, IRDA interface distance type / straight beam	BHT-8048D Handstrap Operator's Guide	(496310-2850) (454862-0110) (496487-4150)	512 Kbyte RAM, 8 MB ROM, 26 keys, dark blue colour
OS	BHT-8000	Terminal	BHT-8048DB (2 Years warranty)	496300-3501	Hand Held 1D Batch Terminal, numeric keypad, IRDA interface distance type / straight beam, Bluetooth	BHT-8048DB Handstrap Operator's Guide	496 (454862-0110) (496487-4150)	512 Kbyte RAM, 8 MB ROM, 26 keys, dark blue colour
OS	BHT-8000	Terminal	BHT-8144 (2 Years warranty)	496300-3301	Slant Beam Hand Held 1D Batch Terminal, numeric keypad, IRDA interface	BHT-8144 Handstrap Operator's Guide	496 (454862-0110) (496487-4150)	512 Kbyte RAM, 4 MB ROM, 26 keys, dark blue colour
OS	BHT-8000	Peripheral	CU-8001	496400-1671	Communication Cradle, RS232 Interface, with charging function	CU-8001 Operator's Guide AC Adapter	(496320-1360) (496487-4130) (496460-0390)	with charge option, with EU AC Adapter, UK Adapter 496460-0143A
OS	BHT-8000	Peripheral	CU-8002	496400-1661	Communication Cradle, RS232 Interface, without charging function	CU-8002 Operator's Guide	(496320-1370) (496487-4140)	without charge option, no AC Adapter required
OS	BHT-8000	Peripheral	CU-8011	496400-1871	Communication Cradle, with LAN Interface, with charging function	CU-8011 Operator's Guide	(496320-) (496487-4140)	with charge option AC Adapter required
OS	BHT-8000	Peripheral	CU-8021	496400-1721	Communication Cradle, with USB Interface, with charging function	CU-8021 Operator's Guide	(496320-1420) (496487-4140)	with charge option AC Adapter not necessarily required, but charging cycle w/o adapter will be longer
OS	BHT-8000	Peripheral	C-600	496450-0201	Quick Charger 4 Slots, for B-60N Battery Packs	C-600 Operator's Guide	(496465-0340) (496487-2480)	without AC Adapter
OS	BHT-8000	Accessories	B-60N	496466-0530	Ni-MH Battery Pack, for BHT-8000/BHT-6000	Ni-MH Battery Operator's Guide	496 (496487-2492)	Spare Battery without cover
OS	BHT-8000	Accessories	B-60N+cover	496461-0430	Ni-MH Battery Pack, for BHT-8000 + BHT-8000D	Battery Pack Operator's Guide Battery Cover	(496466-0530) (496487-2492) (496331-1530)	

OS	BHT-8000	Peripheral	AC Adapter	496460-0140	Power supply for C-600+CU-6001/8001	AC Adapter		EU Version
OS	BHT-8000	Peripheral	AC Adapter	496460-0143A	Power supply for C-600+CU-6001/8001	AC Adapter		UK Version
OS	BHT-8000	Peripheral	AC Adapter	454865-0420	Power supply for CU-8011	AC Adapter		100-240V, please add EU/UK converter plug 496467-CP1B for UK market
OS	BHT-8000	Software	Easy Pack Pro	496490-0730	Application prog. for BHT-8000 (7000)	CD ROM		Text file manual included
OS	BHT-8000	Software	Extended Library	496490-0321	BHT-Basic, for BHT-5000, -6000, -7000, -7500/S/W, -8000, -100	CD ROM	(496480-0400)	Text file manual included
OS	BHT-8000	Peripheral	I/F Cable	496400-KAB597	USB interface cable for CU-8021, CU-221, CU-321, CU-421 USB Type A to Type B			1,8 Meter
OS	BHT-8000	Peripheral	I/F Cable	496400-KAB062	RS232 Interface Nullmodem Cable, for CU-201, CU-301, CU-401, CU-8001, CU-8002, Lego Cradles			9 DSub female to 9 Dsub female for PC serial I/F (Com port) and CU
OS	BHT-8000	Peripheral	Cable	496400-S240	Interface Cable, for SATO MB200 and MB400	I/F Cable		
OS	BHT-8000	Peripheral	Cable	496400-333A+	Interface Cable 9-Dsub connector	I/F Cable		for PC serial I/F (Com port)
OS	BHT-8000	Accessories	Case	496301-8LCA	Leather Case for BHT8000, including standard shoulder strap	leather case shoulder strap		
OS	BHT-8000	Accessories	Case	496301-L408	Leather Case for BHT8000, including standard shoulder strap for SATO MB200	leather case shoulder strap		
OS	BHT-8000	Accessories	Soft case	2002392	Soft case for BHT8000			
OS	BHT-8000	Accessories	Holster	1991231	Holster for BHT8000			
OS	BHT-8000	Service	BHT8000 Batch	SERV3191-24	24 Month Service Contract		496300-4430 496300-3281 496300-3341	
OS	BHT-8000	Service	BHT8000 Batch	SERV3191-36	36 Month Service Contract		496300-4430 496300-3281 496300-3341	
OS	BHT-8000	Service	BHT8000 Bluetooth	SERV3500-24	24 Month Service Contract		496300-3501	
OS	BHT-8000	Service	BHT8000 Bluetooth	SERV3500-36	36 Month Service Contract		496300-3501	
OS	BHT-8000	Accessories	Neck Strap	2002374	Neck Strap for BHT8000			
OS	BHT-8000	Consumables	Belt	496472-0110	Hand Strap			minimum lot: 10 pcs.
OS	BHT-8000	Consumables	Battery Case	496331-1520	Battery cover (Alkaline)			minimum lot: 10 pcs.
OS	BHT-8000	Consumables	Battery Case	496331-1530	Battery cover (Ni-MH)			minimum lot: 10 pcs.
OS	Development	Software	DLL TU3	496490-0560	Transfer Utility (DLL), Read-me file included	Floppy Disk 3.5"	(496480-0610)	BHT-3000, BHT-4000, BHT-5000, (32Bit/Windows)
OS	Development	Software	IRTU3C	496490-0450	IR Transfer Utility	Floppy Disk 3.5" User's Guide	(496480-0510) (496487-2140)	BHT-6000/7000/7500/8000/100 16+32Bit, (DOS+Windows)
OS	Development	Software	IRTU3C	496487-2140	User's Guide only	IRTU3C Guide	496487-2140	User's Guide only
OS	Development	Software	DLL IRTU3C	496490-0570	IR Transfer Utility (DLL), 5 Licenses per pack	Floppy Disk 3.5"	(496480-0620)	BHT-6000/7000/7500/8000/100, (32Bit/Windows)
OS	Development	Software	IRTU3E	496490-0440	IR Transfer Utility	Floppy Disk 3.5" IRTU3E Guide	(496480-0580) (496487-2500)	BHT-6000/7000/7500/8000/100 16+32Bit, (DOS+Windows)

OS	Development	Software	IRTU3E	496487-2500	User's Guide only	IRTU3E Guide	496487-2500	User's Guide only
OS	Development	Software	DLL IRTU3E	496490-0580	IR Transfer Utility (DLL) 5 Licenses per pack	Floppy Disk 3.5"	(496480-0630)	BHT-6000/7000/7500/8000/100, (32Bit/Windows)
OS	Development	Software-Compiler	BHT Advanced Pack	496490-0810	Application prog. for BHT's NEW	CD-ROM		All BHT's
OS	Development	Software-Compiler	BHT-Basic 3.6	496490-0602	Compiler	CD-ROM		All BHT's
OS	Development	Software-Compiler	BHT-Basic 4.0	496490-0821	Development Kit	Compiler 4.0 Remote Debugger 4.0 Transfer Utility 4.0		All BHT's (Remote debugger can only be used on 32 BIT processor), Note: Special Basic 4.0
OS	Development	Software-Compiler	BHT-Basic 4.0	496490-0831	Upgrade Kit, Note: Update kit requires Basic 3.6 Remote debugger, Version 1.21 and Transfer Transfer Utility 4.0	Compiler 4.0 Remote Debugger 4.0 Transfer Utility 4.0		All BHT's (Remote debugger can only be used on 32 BIT processor), Note: Special Basic 4.0
OS	Development	Software-Compiler	BHT-Basic 4.0 Trans	496490-0850				All BHT's (32Bit/Windows)
OS	Development	Software-Compiler	BHT-Basic 4.0 Trans	496490-0860	Transfer Utility DLL Pack, 5 licenses per pack			All BHT's (32Bit/Windows)
Reader	2D	QR Code	QS20H (min.quantity: 5 pcs.)	496800-0402	Hand Held 2D Scanner Set	QS-20H I/F Cable User's Manual	(496810-0122) (496872-0221) (496817-0120)	without AC Adapter
Reader	2D	QR Code	QS20H-U (min.quant	496800-0560	Hand Held 2D Scanner Set, USB Interface	QS-20H CD-ROM I/F Cable	(496810-0480) (496488-1190) (496872-0441)	AC Adapter not required, USB driver AC Adapter not required
Reader	2D	QR Code	QS20H-HD (min.quant	496800-0422	Hand Held 2D Scanner Set, high resolution type	QS-20H-HD I/F Cable User's Manual	(496810-0321) (496872-0221) (496817-0120)	without AC Adapter
Reader	2D	QR Code	QS20P	496800-0321	Hand Held 2D Pen Scanner Set	QS-20P User's Manual	(496810-0250) (496817-0250)	without AC Adapter
Reader	2D	QR Code	QD20	496800-0372	2D Camera Decoder Set	QD20 Decoder Camera Video cable	(496820-0110) (496826-0020) (496870-0070)	without AC Adapter, without LED ring, without Lens
Reader	2D	QR Code	QK12-R (min.quantity	496800-0920	2D Portable Desktop Scanner RS232 Interface	QK-12R Operation Manual		
Reader	2D	QR Code	QK12-U (min.quantity	TBA	2D portable desktop scanner USB Interface	QK12-U		
Reader	2D	Peripheral	AC Adapter	496451-0300	Power Supply for QS-20P EU	AC Adapter Primary Adapter		EU Version
Reader	2D	Peripheral	AC Adapter	496451-0400	Power Supply for QS-20P UK	AC Adapter Primary Adapter		UK Version
Reader	2D	Peripheral	AC Adapter	SPU12C-103	Power Supply for QS-20H EU	AC Adapter Primary Adapter		EU Version
Reader	2D	Peripheral	AC Adapter	454865-0420	for CU-200, CH-251, CU-300, CH-351, CU- 401, CU-421, CH-451, GT-10, QK-12, CU-8011			100-240V, please add EU/UK converter plug 496467-CP1B for UK market
Reader	2D	Software	QR DRAW Pro	995810-1110	Application Program*	Floppy Disk 3.5" User's Manual	(496991-0030) (496995-0070)	Windows 32 Bit, Code generating file
Reader	2D	Software	QR MAKER Pro	496983-0040	Application Program	Floppy Disk 3.5" User's Manual	496 (496995-0080)	Windows 32 Bit, OCX file
Reader	2D	Software	QR VERIFIER	594536-0410	Application Program	Floppy Disk 3.5" User's Manual		
Scanner	GT-10	Scanner 1D	GT10B-SM (5 Years	104548-7910	Hand Held 1D Scanner, Standard Type Multi Interface RS232/Keyboard emulation	GT-10 SM Operators Guide	(454800-8870) (496893-1990)	Head only, excluding I/F cable, excluding AC Adapter
Scanner	GT-10	Scanner 1D	GT10B-LM (5 Years	104548-7920	Hand Held 1D Scanner, Long Range Type, Multi Interface RS232/Keyboard emulation	GT-10 LM Operators Guide	(454800-8880) (496893-1990)	Head only, excluding I/F cable, excluding AC Adapter
Scanner	GT-10	Scanner 1D	GT10B-SU (5 Years	104548-7930	Hand Held 1D Scanner, Standard Type USB Interface with keyboard emulation	GT-10 SU Operators Guide	(454800-8890) (496893-2040)	Head only, excluding I/F cable
Scanner	GT-10	Scanner 1D	GT10B-LU (5 Years	104548-7940	Hand Held 1D Scanner, Long Range Type, USB Interface with keyboard emulation	GT-10 LU Operators Guide	(454800-8900) (496893-2040)	Head only, excluding I/F cable

Scanner	GT-10	Scanner 1D	GT10B-SB	104548-7950	Hand Held 1D Scanner, Standard Type, Bluetooth Interface			Standard range, Including one battery
Scanner	GT-10	Scanner 1D	GT10B-SB KIT1	104548-7950-KIT1	Hand Held 1D Scanner, Standard Type, Bluetooth Interface, incl. Charger, AC adapter	GT10B-SB CH-GT10N AC Adapter	(104548-7950) (454865-0390) (454865-0420)	Standard range, Including one battery, charger, AC adapter
Scanner	GT-10	Scanner 1D	GT10B-SB KIT2	104548-7950-KIT2	Hand Held 1D Scanner, Standard Type, Bluetooth Interface, incl. Charger, AC adapter, Bluetooth adapter	GT10 Bluetooth KIT 1 BA-10RKU	(104548-7950-KIT1) (454920-0020)	Please select interface cable 454865-9040,9050,9060 or 9070
Scanner	GT-10	Scanner 1D	GT10B-LB	104548-7960	Hand Held 1D Scanner, Long range Type Bluetooth Interface			Long range, Including one battery
Scanner	GT-10	Scanner 2D	GT10Q-SR (5 Years	496800-0682	Hand Held 2D Scanner, Standard Type RS232 Interface NEW	GT10Q-SR Users Manual	(496810-0600) (496817-0511)	Head only, excluding I/F cable, excluding AC Adapter
Scanner	GT-10	Scanner 2D	GT10Q-SU (5 Years	496800-0692	Hand Held 2D Scanner, Standard Type USB Interface NEW	GT10Q-SU Users Manual USB Driver (CD-ROM)	(496810-0610) (496817-0541) (496480-0721)	Head only, excluding I/F cable
Scanner	GT-10	Scanner 1D	GT11B-SM (5 Years	104548-7970	GT-11 SM Operators Guide			Head only, excluding I/F cable, excluding AC Adapter
Scanner	GT-10	Scanner 1D	GT11B-SU (5 Years	104548-7980	GT-11 SU Operators Guide			Head only, excluding I/F cable
Scanner	GT-10	Scanner 2D	GT10Q-SB	496800-0902	Hand Held 2D Scanner, Standard Type, Bluetooth Interface			Standard range, Including one battery
Scanner	GT-10	Peripheral	Interface Cable	454890-8970	RS232 straight, for GT10B-SM/LM, GT10Q-SR, GT11B-SM/LM			9 D-Sub female, RS232 Interface
Scanner	GT-10	Peripheral	Interface Cable	454890-8980	Keyboard Emulation straight, 2 meter for GT10B-SM/LM, GT11B-SM/LM			PS2 Y-cable, Keyboard Interface
Scanner	GT-10	Peripheral	Interface Cable	454890-8990	USB Cable straight, for GT10B-SU/LU, GT10Q-SU, GT11B-SU/LU			A-Type USB
Scanner	GT-10	Peripheral	Interface Cable	454890-9010	RS232 curled, for GT10B-SM/LM, GT10Q-SR, GT11B-SM/LM NEW			9 D-Sub female, RS232 Interface
Scanner	GT-10	Peripheral	Interface Cable	454890-9000	RS232 straight, 5 meter, for GT10B-SM/LM; GT10Q-SR, GT11B-SM/LM NEW			9 D-Sub female, RS232 Interface
Scanner	GT-10	Peripheral	Interface Cable	454890-9020	Keyboard Emulation curled, for GT10B-SM/LM, GT11B-SM/LM			PS2 Y-cable, Keyboard Interface
Scanner	GT-10	Peripheral	Interface Cable	454891-9740	5 meter stretched Y-curved 9-DSUB for female for GT-10B-SM/LM, GT-11B-SM/LM			D-Sub female, RS232 Interface
Scanner	GT-10	Peripheral	Interface Cable	454890-9070	for BA-10RKU, Integrated Type			I/F:RS232C 2M, for BA10-RKU built in the CH-GT10N
Scanner	GT-10	Peripheral	Interface Cable	454890-9040	for BA-10RKU			I/F:RS232C 2M
Scanner	GT-10	Peripheral	Interface Cable	454890-9050	for BA-10RKU			I/F:Key board 2M
Scanner	GT-10	Peripheral	Interface Cable	454890-9060	for BA-10RKU			I/F:USB 2M
Scanner	GT-10	Accessories	SB-10N	454863-0040	Battery for GT-10, Bluetooth			Nickel-hydrogen Battery
Scanner	GT-10	Peripheral	CH-GT10N	454865-0390	Charger for GT-10, Bluetooth			Charger function only, w/o AC adapter
Scanner	GT-10	Peripheral	BA-10RKU	454920-0020	Adapter for GT-10, Bluetooth			Bluetooth Adapter
Scanner	GT-10	Peripheral	AC Adapter	454865-0420	for CU-200, CH-251, CU-300, CH-351, CU-401, CU-421, CH-451, GT-10, QK-12, CU-8011			100-240V, please add EU/UK converter plug 496467-CP1B for UK market
Scanner	GT-10	Accessories	S-10	454875-0750	Headholder for GT-10 NEW			
Scanner	GT-10	Accessories	SH-10	2003252	Hands Free Stand for GT-10 NEW			

Scanner	GT-10	Accessories	H-GT11	2003698	Hands Free Stand for GT-11 NEW			
Scanner	GT-10	Accessories	K-GT10	2003611	Holster			
Scanner	GT-10	Accessories	T-GT10	2003377	Ceiling Mounted Stand			
Scanner	GT-10	Accessories	Neck strap	2002374	Neck strap			
Scanner	HC-36	Scanner 1D	HC-36IIDTR (5 Years	104548-6972	Hand Held 1D Scanner, Distance Type Minimum Order Quantity 10 pcs.	HC-36IIDTR Cable Safety Guide	(454800-8272) (454890-7670) (454893-1051)	Trigger, RS232, 25Pin Dsub male, 2m straight
Scanner	HC-36	Scanner 1D	HC-36IIDTR (5 Years	454800-8272	Hand Held 1D Scanner, Distance Type Head only Minimum Order Quantity 10 pcs.	HC-36IIDTR	454800-8272	Trigger, RS232, Head only
Scanner	HC-36	Scanner 1D	HC-36IIDTKA (5 Year	104548-6823	Hand Held 1D Scanner, Distance Type Minimum Order Quantity 10 pcs.	HC-36IIDTKA Cable Operational Manual	(454800-7963) (454890-7830) (454893-1541)	Trigger, Keyboard Emulation Y-cable, PS2 (6Pin Mini DIN)
Scanner	HC-36	Scanner 1D	HC-36DTU-K (5 Year	104548-8110	Hand Held 1D Scanner, Distance Type Minimum Order Quantity 10 pcs.	HC-36DTU-K Cable Operational Manual	(454800-7713) (454890-7250) (454893-1800)	Trigger, USB, Keyboard Emulation, Barcode menu
Scanner	HC-36	Scanner 1D Touch Type	HC-36IIR (5 Years w	104548-6582	Hand Held 1D Scanner, Touch type Minimum Order Quantity 10 pcs.	HC-36IIR Cable Safety Guide	(454800-8980) (454890-7670) (454893-1051)	RS232, 25Pin Dsub male, 2m straight
Scanner	HC-36	Scanner 1D Touch Type	HC-36IIR (5 Years w	454800-8980	Hand Held 1D Scanner, Touch type Head only Minimum Order Quantity 10 pcs.	HC-36IIR	454800-8980	RS232 Head only
Scanner	HC-36	Scanner 1D Touch Type	HC-36IITR (5 Years v	104548-6372	Hand Held 1D Scanner, Touch type Minimum Order Quantity 10 pcs.	HC-36IITR Cable Safety Guide	(454800-7662) (454890-7670) (454893-1051)	Trigger, RS232, 25Pin Dsub male, 2m straight
Scanner	HC-36	Scanner 1D Touch Type	HC-36IITR (5 Years v	454800-7662	Hand Held 1D Scanner, Touch type Head only Minimum Order Quantity 10 pcs.	HC-36IITR	454800-7662	Trigger, RS232 Head only
Scanner	HC-36	Scanner 1D Touch Type	HC-36IITKA 5 Year	104548-6812	Hand Held 1D Scanner, Touch type Minimum Order Quantity 10 pcs.	HC-36IITKA Cable Operational Manual	(454800-7952) (454890-7830) (454893-1541)	Head only, Trigger, Keyboard Emulation Y-cable, PS2 (6Pin Mini DIN)
Scanner	HC-36	Scanner 1D Touch Type	HC-36IITU-K (5 Year	104548-7811	Hand Held 1D Scanner, Touch type Minimum Order Quantity 10 pcs.	HC-36IITU-K Cable Operational Manual	(454800- (454890-7250) (454893-1800)	Trigger, USB, Keyboard Emulation, Straight 2m Barcode menu
Scanner	HC-36	Peripheral	Cable	454891-JAAA	straight 2m, open end			for HC-36R and HC-36TR
Scanner	HC-36	Peripheral	Cable	454891-JBBBB	curled 1.15/2.5m, open end			for HC-36R and HC-36TR
Scanner	HC-36	Peripheral	Cable	454890-7670	straight 2m, 25pin Dsub male			for HC36R Series
Scanner	HC-36	Peripheral	Cable	454891-BMBB+	curled 1.15/2.5m, 9pin Dsub female			for HC36(D),(T), BC and IW3000
Scanner	HC-36	Accessories	S-60 W	454875-0400	Head Holder (Plastic)			
Scanner	HC-36	Accessories	S-60 M	454875-0410	Head Holder (Rubber)			
WinCE	BHT-200	Terminal	BHT-212BW-CE	496300-3574	Hand Held 1D RF Terminal, including IEEE802.11b, Radio Module, numeric palm version, USB interface, IRDA	BHT-212BW-CE Handstrap Stylus	(496310-3112) (496472-0140) (496334-0091)	26 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-212QW-CE	104969-0262	Hand Held 2 D RF Terminal, including IEEE802.11b, Radio Module, numeric palm version, USB interface, IRDA	BHT-212QW-CE Handstrap Stylus	(496900-0261) (496472-0140) (496334-0091)	26 keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-232BW-CE	496300-4222	Hand Held 1D RF Terminal, including IEEE802.11b, Radio Module, numeric gun grip version, USB interface, IRDA	BHT-232BW-CE Handstrap Stylus	(496310-3730) (496472-0140) (496334-0091)	26 keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-262BW-CE	496300-3294	Hand Held 1D RF Terminal, including IEEE802.11b, Radio Module, alphanumeric palm version, USB interface,	BHT-262BW-CE Handstrap Stylus	(496310-2992) (496472-0140) (496334-0091)	30 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-262B-CE	496300-3534	Hand Held 1D Batch Terminal, alphanumeric, palm version, USB interface, IRDA interface, 30 Keys, 128 MB RAM, 64 MB	BHT-262B-CE Handstrap Stylus	(496310-3062) (496472-0140) (496334-0091)	30 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-262QW-CE	104969-0242	Hand Held 2 D RF Terminal, including IEEE802.11b, Radio Module, alphanumeric palm version, USB interface,	BHT-262QW-CE Handstrap Stylus	(496900-0241) (496472-0140) (496334-0091)	30 keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L

WinCE	BHT-200	Terminal	BHT-282BW-CE	496300-3594	Hand Held 1D RF Terminal, including IIEE802.11b, Radio Module, alphanumeric gun grip version, USB interface,	BHT-282BW-CE Handstrap Stylus	(496310-3152) (496472-0140) (496334-0091)	30 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-282B-CE	496300-4202	Hand Held 1D Batch Terminal, alphanumeric gun grip version, USB interface, IRDA interface, 30 Keys, 128	BHT-282B-CE Handstrap Stylus	(496310-3710) (496472-0140) (496334-0091)	30 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Terminal	BHT-282QW-CE	104969-0222	Hand Held 2D RF Terminal, including IIEE802.11b Radio Module, alphanumeric gun grip version, USB interface,	BHT-282QW-CE Handstrap Stylus	(496900-0222) (496472-0140) (496334-0091)	30 Keys, 128 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-200	Peripheral-Lego	AC Adapter 1-slot, E	496460-0444	1 slot, 230VAC/12VDC EU Version for CU series	EU version		
WinCE	BHT-200	Peripheral-Lego	AC Adapter 1-slot, U	496460-0555	1 slot, 230VAC/12VDC UK Version for CU series	UK version		
WinCE	BHT-200	Peripheral-Lego	AC Adapter 4-slot, E	496460-0222	4 slot, 100-240 VAC/12 VDC EU Version for CU series	EU version		
WinCE	BHT-200	Peripheral-Lego	AC Adapter 4-slot, U	496460-0333	4 slot, 100-240 VAC/12 VDC UK Version for CU series	UK version		
WinCE	BHT-200	Peripheral-Lego	Base USB	496400-234U	USB interface for BHT-200, BHT-400			
WinCE	BHT-200	Peripheral-Lego	Base Serial	496400-234S	RS232 interface for BHT-200, BHT-300, BHT-400			
WinCE	BHT-200	Peripheral-Lego	Base Charger	496400-234H	Charging cradle for BHT-200, BHT-300, BHT-400 w/o communication, charging only			
WinCE	BHT-200	Peripheral-Lego	Terminal adapter for	496400-0222	Adapter for CU-Base for BHT-200			
WinCE	BHT-200	Peripheral	CU-201	496400-1711	Communication Cradle, RS232 Interface, with charging function	CU-201 Operators Guide	(496320-1460) (496487-4430)	w/o AC Adapter, I/F: RS232C
WinCE	BHT-200	Peripheral	CU-221	496400-1891	Communication Cradle, USB Interface with charging function	CU-221 Operators Guide Install Guide	(496320-1500) (496487-4570) (496487-4590)	w/o AC Adapter, I/F: USB
WinCE	BHT-200	Peripheral	CH-201	496450-0511	1 Slot Battery Charger	CH-201 PW Cable EU User's Manual	(496465-0640) (496487-4440)	with EU Power cable, please add EU/UK converter plug 496467-CP1B for UK market
WinCE	BHT-200	Peripheral	CH-204	995810-1120	4 Slot Battery Charger	CH-204 PW cable EU		4x CH-201 included with EU power cord for UK free converter plug 496467-CP2B required
WinCE	BHT-200	Peripheral	CH-251	496450-0611	Unit Charging, Only Charging function	CH-251 Operators Guide	(496465-0650) (496487-4580)	w/o AC Adapter
WinCE	BHT-200	Accessories	BT-20L	496461-0450	Battery Pack, for BHT-200, BHT-300, BHT-400	BT-20L Case for battery cartridge	(496499-0900) (496471-0150) (496487-4410)	Lithium-Ion
WinCE	BHT-200	Peripheral	AC Adapter	454865-0420	for CU-200, CH-251, CU-300, CH-351, CU-401, CU-421, CH-451, GT-10, QK-12, CU-8011			100-240V, please add EU/UK converter plug 496467-CP1B for UK market
WinCE	BHT-200	Peripheral	I/F Cable	496400-KAB597	USB interface cable for CU-8021, CU-221, CU-321, CU-421 USB Type A to Type B			1,8 Meter
WinCE	BHT-200	Peripheral	I/F Cable	496400-KAB062	RS232 Interface Nullmodem Cable, for CU-201, CU-301, CU-401, CU-8001, CU-8002, Lego Cradles			9 DSub female to 9 Dsub female for PC serial I/F (Com port) and CU, 1,8 Meter
WinCE	BHT-200	Peripheral	I/F Cable	2003707	RS232 Interface cable for new BHT-2x2, BHT-420BG models, A-Type to 9DSub Female			
WinCE	BHT-200	Peripheral	I/F Cable	2003708	USB interface cable for new BHT-2x2, BHT-420BG models, A-Type to USB mini B (5pin)			
WinCE	BHT-200	Peripheral	I/F Cable	496400-SON001	USB interface cable for old BHT-2x0 A-Type to USB mini B (5pin)			
WinCE	BHT-200	Software	Freefloat Access*One	FRE3000-1200	Terminal Emulation Software for BHT-200, BHT-400 1 licence	1 licence		
WinCE	BHT-200	Software	Freefloat Access*One	FRE3000-5200	Terminal Emulation Software for BHT-200, BHT-400 5 licences	5 licences		
WinCE	BHT-200	Software	Freefloat Access*One	FRE3000-10200	Terminal Emulation Software for BHT-200, BHT-400 10 licence	10 licences		

WinCE	BHT-200	Service	BHT200 Batch	SERV3530-24	24 Month Service Contract		496300-353X	
WinCE	BHT-200	Service	BHT200 Batch	SERV3530-36	36 Month Service Contract		496300-353X	
WinCE	BHT-200	Service	BHT200 WiFi	SERV3570-24	24 Month Service Contract		496300-357X 496300-329X 496300-394X	
WinCE	BHT-200	Service	BHT200 WiFi	SERV3570-36	36 Month Service Contract		496300-357X 496300-329X 496300-394X	
WinCE	BHT-200	Service	BHT200 WiFi 2D	SERV0240-24	24 Month Service Contract		104969-024X 104969-026X	
WinCE	BHT-200	Service	BHT200 WiFi 2D	SERV0240-36	36 Month Service Contract		104969-024X 104969-026X	
WinCE	BHT-200	Service	BHT200 WiFi Gun Gr	SERV3590-24	24 Month Service Contract		496300-359X	
WinCE	BHT-200	Service	BHT200 WiFi Gun Gr	SERV3590-36	36 Month Service Contract		496300-359X	
WinCE	BHT-200	Service	BHT200 WiFi 2D Gun	SERV0220-24	24 Month Service Contract		104969-022X	
WinCE	BHT-200	Service	BHT200 WiFi 2D Gun	SERV0220-36	36 Month Service Contract		104969-022X	
WinCE	BHT-200	Consumables	Stick	496334-0091	Stylus			minimum lot: 10 pcs.
WinCE	BHT-200	Consumables	Belt	496472-0140	Hand Strap			minimum lot: 10 pcs.
WinCE	BHT-200	Consumables	Battery cartridge cover	496342-0020	Battery cover			minimum lot: 10 pcs.
WinCE	BHT-200	Accessories	Holster for BHT-212	496301-2HOL	Leather holster for BHT-200			
WinCE	BHT-200	Accessories	Soft case for BHT-21	2003568	Soft case for BHT 200B/BW series			
WinCE	BHT-200	Accessories	Holster for BHT-212B	2003569	Holster for BHT 200B/BW series			
WinCE	BHT-200	Accessories	Soft case for BHT-21	2003678	Soft case for BHT 200Q/QW series			
WinCE	BHT-200	Accessories	Holster for BHT-212	2003679	Holster for BHT 200BW + Q/QW series			
WinCE	BHT-400	Accessories	BT-20L A	496461-0550	Battery Pack, for BHT-400 with large battery for BHT-480 only	BT-20L A Case for battery cartridge	tba (496471-0150) (496487-4410)	Lithium-Ion (high capacity)
WinCE	BHT-400	Accessories	BT-20L	496461-0450	Battery Pack, for BHT-200, BHT-300, BHT-400	BT-20L Case for battery cartridge	(496499-0900) (496471-0150) (496487-4410)	Lithium-Ion
WinCE	BHT-400	Terminal	BHT-420B-CE	496300-4341	Hand Held 1D Batch Terminal, numeric version, Multi interface, IRDA interface, slant beam	BHT-420B-CE EU BT-20L		31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-420BB-CE	496300-4351	Hand Held 1D RF Terminal, Bluetooth on board, numeric version, Multi interface, IRDA interface, slant beam	BHT-420BB-CE EU BT-20L		31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-420BW-CE	496300-4031	Hand Held 1D RF Terminal, including IEEE802.11b/g Radio Module on board, numeric version, Multi interface, IRDA interface, slant beam	BHT-420BW-CE EU BT-20L	(496300-) (496461-0450)	31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-420BWB-CE	496300-4331	Hand Held 1D RF Terminal, including IEEE802.11b/g Bluetooth, Radio Module on board, numeric version, Multi interface, IRDA interface, slant beam	BHT-420BWB-CE EU BT-20L		31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-420BG-CE	496300-4551	Hand Held 1D RF Terminal, including GPRS on board, numeric version, Multi interface, IRDA interface, slant beam	BHT-420BG-CE EU BT-20L	(496300-4551) (GPRS400)	31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-420BWBG-CE	496300-4561	Hand Held 1D RF Terminal, including IEEE802.11b/g Bluetooth, Radio Module & GPRS on board, numeric version, Multi interface, IRDA interface, slant beam	BHT-420BWBG-CE EU BT-20L	(496300-4561) (GPRS400)	31 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L

WinCE	BHT-400	Terminal	BHT-470BW-CE	496300-4381	Hand Held 1D RF Terminal, including IEEE802.11b/g Radio Module on board, alphanumeric version.	BHT-470BWB-CE EU BT-20L		50 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Terminal	BHT-480BW-CE	496300-4600	Hand Held 1D RF Terminal, including IEEE802.11b/g, Gun grip version Radio Module on board, alphanumeric version.	BHT-480BWB-CE EU BT-20L A	tba	50 Keys (3 trigger keys), 64 MByte RAM, 64 MByte ROM, including one battery pack BT-20L
WinCE	BHT-400	Peripheral	CU-401 A	496400-2130	Communication Cradle, RS232 Interface, with charging function for BT-20L A	CU-401 A Operators Guide	tba	w/o AC Adapter, I/F: RS232C
WinCE	BHT-400	Peripheral	CU-401	496400-2051	Communication Cradle, RS232 Interface, with charging function	CU-401 Operators Guide		w/o AC Adapter, I/F: RS232C
WinCE	BHT-400	Peripheral	CU-421 A	496400-2140	Communication Cradle, USB Interface with charging function for BT-20L A	CU-421 A Operators Guide Install Guide		w/o AC Adapter, I/F: USB
WinCE	BHT-400	Peripheral	CU-421	496400-2061	Communication Cradle, USB Interface with charging function	CU-421 Operators Guide Install Guide		w/o AC Adapter, I/F: USB
WinCE	BHT-400	Peripheral	CH-451 A	496450-0710	Unit Charging, Only Charging function for BT-20L A	CH-451 Operators Guide		w/o AC Adapter
WinCE	BHT-400	Peripheral	CH-451	496450-0671	Unit Charging, Only Charging function	CH-451 Operators Guide		w/o AC Adapter
WinCE	BHT-400	Peripheral	AC Adapter	454865-0420	for CU-200, CH-251, CU-300, CH-351, CU-401, CU-421, CH-451, GT-10, QK-12, CU-8011			100-240V, please add EU/UK converter plug 496467-CP1B for UK market
WinCE	BHT-400	Peripheral	Cable	2004001	USB I/F cable for BHT-400 (not for BHT-420BG models), 1.8 meter USB			
WinCE	BHT-400	Peripheral	Cable	2004000	RS232 cable for BHT-400 (not for BHT-420BG models), 1.8 meter USB			
WinCE	BHT-400	Peripheral-Lego	BHT-400 Car Cradle	496450-444C	1 Slot, 12-24 Volt DC	Car Cradle Kit Cigar Lighter power lead 12V-24V DC		
WinCE	BHT-400	Peripheral-Lego	AC Adapter 1-slot, E	496460-0444	1 slot, 230VAC/12VDC EU Version for CU series	EU version		
WinCE	BHT-400	Peripheral-Lego	AC Adapter 1-slot, U	496460-0555	1 slot, 230VAC/12VDC UK Version for CU series	UK version		
WinCE	BHT-400	Peripheral-Lego	AC Adapter 4-slot, E	496460-0222	4 slot, 100-240 VAC/12 VDC EU Version for CU series	EU version		
WinCE	BHT-400	Peripheral-Lego	AC Adapter 4-slot, U	496460-0333	4 slot, 100-240 VAC/12 VDC UK Version for CU series	UK version		
WinCE	BHT-400	Peripheral-Lego	Base USB	496400-234U	USB interface for BHT-200, BHT-400			
WinCE	BHT-400	Peripheral-Lego	Base Serial	496400-234S	RS232 interface for BHT-200, BHT-300, BHT-400			
WinCE	BHT-400	Peripheral-Lego	Base Charger	496400-234H	Charging cradle for BHT-200, BHT-300, BHT-400 w/o communication, charging only			
WinCE	BHT-400	Peripheral-Lego	Terminal adapter for	496400-0444	Adapter for CU-Base for BHT-400			
WinCE	BHT-400	Peripheral	I/F Cable	496400-KAB062	RS232 Interface Nullmodem Cable, for CU-201, CU-301, CU-401, CU-8001, CU-8002, Lego Cradles			9 Dsub female to 9 Dsub female, for PC serial I/F (Com port) and CU, 1,8 Meter
WinCE	BHT-400	Peripheral	I/F Cable	496400-KAB597	USB interface cable for CU-8021, CU-221, CU-321, CU-421 USB Type A to Type B			1,8 Meter
WinCE	BHT-400	Software	Freefloat Access*One	FRE3000-1200	Terminal Emulation Software for BHT-200, BHT-400 1 licence	1 licence		
WinCE	BHT-400	Software	Freefloat Access*One	FRE3000-5200	Terminal Emulation Software for BHT-200, BHT-400 5 licences	5 licences		
WinCE	BHT-400	Software	Freefloat Access*One	FRE3000-10200	Terminal Emulation Software for BHT-200, BHT-400 10 licence	10 licences		
WinCE	BHT-400	Peripheral	CH-201 A	496450-0720	1 Slot Battery Charger for BT-20L A large battery	CH-201 A PW Cable EU User's Manual	tba (496 (496487-4440)	with EU Power cable, please add EU/UK converter plug 496467-CP1B for UK market

WinCE	BHT-400	Peripheral	CH-201	496450-0511	1 Slot Battery Charger	CH-201 PW Cable EU User's Manual	(496465-0640) (496 496487-4440)	with EU Power cable, please add EU/UK converter plug 496467-CP1B for UK market
WinCE	BHT-400	Peripheral	CH-204	995810-1120	4 Slot Battery Charger	CH-204 PW cable EU		4x CH-201 included with EU power cord for UK free converter plug 496467-CP2B required
WinCE	BHT-400	Service	BHT400 WiFi Bluetoc	SERV4331-24	24 Month Service Contract		496300-433X	
WinCE	BHT-400	Service	BHT400 WiFi Bluetoc	SERV4331-36	36 Month Service Contract		496300-433X	
WinCE	BHT-400	Service	BHT400 WiFi	SERV4380-24	24 Month Service Contract		496300-403X 496300-438X	
WinCE	BHT-400	Service	BHT400 WiFi	SERV4380-36	36 Month Service Contract		496300-403X 496300-438X	
WinCE	BHT-400	Service	BHT400 GPRS	SERV4551-24	24 Month Service Contract		496300-455X	
WinCE	BHT-400	Service	BHT400 GPRS	SERV4551-36	36 Month Service Contract		496300-455X	
WinCE	BHT-400	Service	BHT400 WiFi GPRS	SERV4561-24	24 Month Service Contract		496300-456X	
WinCE	BHT-400	Service	BHT400 WiFi GPRS	SERV4561-36	36 Month Service Contract		496300-456X	
WinCE	BHT-400	Service	BHT400 Gun Grip W	SERV4600-24	24 Month Service Contract		496300-460X	
WinCE	BHT-400	Service	BHT400 Gun Grip W	SERV4600-36	36 Month Service Contract		496300-460X	
WinCE	BHT-400	Service	BHT400 Bluetooth	SERV4351-24	24 Month Service Contract		496300-435X	
WinCE	BHT-400	Service	BHT400 Bluetooth	SERV4351-36	36 Month Service Contract		496300-435X	
WinCE	BHT-400	Peripheral	I/F Cable	2003707	RS232 Interface cable for new BHT-2x2, BHT- 420BG models, A-Type to 9DSub Female			
WinCE	BHT-400	Peripheral	I/F Cable	2003708	USB Interface cable for new BHT-2x2, BHT- 420BG models, A-Type to USB mini B (5pin)			
WinCE	BHT-400	Accessories	Soft case for BHT-400	2004269	Soft case for BHT 420B series			
WinCE	BHT-400	Accessories	Holster for BHT-400B	2004270	Holster for BHT 420B series			
WinCE	BHT-400	Accessories	Nylon padded Holster	496301-L879	Holster for BHT 420B series Nylon padded			
WinCE	BHT-400	Accessories	Leather case for BHT	496301-L894	Leather case for BHT-400			
WinCE	BHT-400	Accessories	Quick Release Belt C	496301-QRC1	Belt clip for BHT-400 leather case			